

Simple & efficient air distribution control.
Facilitates enhanced comfort and energy cost savings.

Features

- Control your system with up to 2 x 5" LCD touchpads
- Control each zone in 10% increments
- Control up to 16 zones
- Personalize your system labels
- Turbo zone function
- 5-1-1 On/Off Timer Program
- Periodic service reminder
- Ideal for new and existing homes



Zonemaster - ZoneTouch V2 System

Item #	Description
657196	ZoneTouch V2 Main Module
657197	ZoneTouch V2 Touch Pad
657180	Expansion Module + Lead & Plugs (9-16 Zone Kits Only)
657095	Control Cable 12m
657096	Data Cable 12m
657154	Neat 24V Transformer
657159	Data Cable Kit

ZoneTouch System Configuration

Item #	Description	1 Zone	2 Zones	3 Zones	4 Zones	5 Zones	6 Zones	7 Zones	8 Zones	9 Zones	10 Zones	11 Zones	12 Zones	13 Zones	14 Zones	15 Zones	16 Zones
657196	ZoneTouch V2 Main Module																
657197	ZoneTouch V2 Touch Pad																
657180	Expansion Module + Lead & Plugs	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
657154	NEAT 24V Transformer									2	2	2	2	2	2	2	2
657095	Control Cable 12M		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
657096	Data Cable 12M																
Full Kit Product Code:		672070	672071	672072	672073	672074	672075	672076	672077	672078	672079	672080	672081	672082	672083	672084	672085

Option for Bypass Control System

Item #	Description	1 Zone	2 Zones	3 Zones	4 Zones	5 Zones	6 Zones	7 Zones	8 Zones	9 Zones	10 Zones	11 Zones	12 Zones	13 Zones	14 Zones	15 Zones	16 Zones
657186	NEAT Supply Air Sensor with 7M lead																

Note: Motorised Dampers must be purchased separately