

(657222) Commissioning Notes & Wiring Diagram

1. Wire AirTouch, gateway, YCJ-A002 (supplied by Haier) and AC indoor as per diagram. Make sure all wires are connected properly.
2. Set the dipswitch settings on the YCJ-A002 and the gateway as shown on the drawing as required.
3. In default, AC will use its own return air sensor as control sensor. Installers can set the AC control thermistor to an AirTouch 5 sensor by going to **Settings>Installer>AC Setup** on the AirTouch console.


Note: 0=Off, 1=On

Gateway Address Setting	
S1	Gateway Address:
1000	1
0100	2
1100	3
0010	4

YCJ-A002 Adaptor	
SW1	BM1
00000000	01

Gateway ID Setting	
S2	ID
0001	Haier

For gateway address's 5-8 see p77

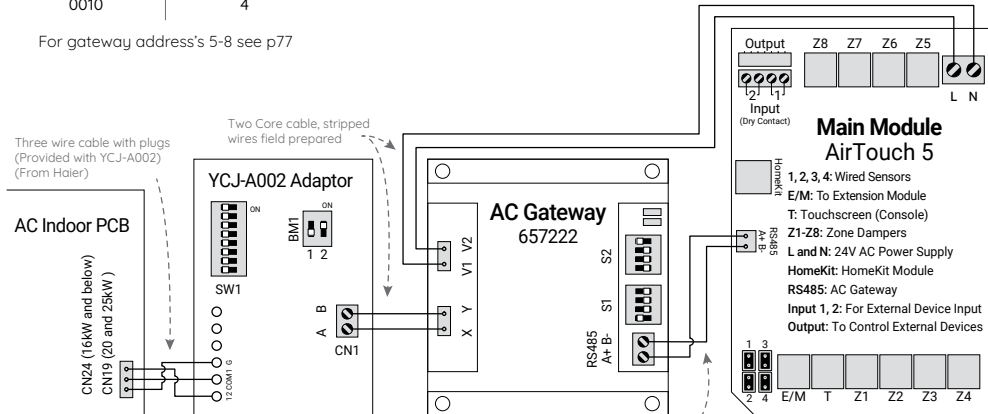

657211 (RS485 Cable) from Polygaire
(Provided with Gateway)