

(657244) Commissioning Notes & Wiring Diagram

1. Wire AirTouch, gateway and AC indoor as per diagram and leave the dipswitches on the gateway at their default position. If the gateway address is not 1, follow the Gateway Address Setting table to set dipswitch S1. Make sure all wires are connected properly.
2. Initialise the AC Unit with ME AC Wall Controller connected.
Check the AC field settings with the wall controller and make sure the AC control temperature is measured from the indoor unit return air.
3. Remove the ME wall controller if it is not to be used after commissioning.
4. If an AirTouch sensor is used for AC temperature control, go to AirTouch AC setting and choose the AirTouch sensor. Make sure the AC control temperature is set to the indoor unit return air.

Note: 0=Off, 1=On



Gateway Address Setting	
S1	Gateway Address:
1000	1
0100	2
1100	3
0010	4

For gateway address's 5-8 see p77

