

(657245) Commissioning Notes & Wiring Diagram

1. Wire AirTouch, gateway and AC indoor as per diagram on the left and leave the dipswitches on the gateway at their default position. Make sure all wires are connected properly.
2. If AirTouch sensor is used for AC temperature control:
Go to AirTouch AC setting and choose the proper sensor.
3. If the gateway address is not 1, please change the S1 setting as below.

Note: 0=Off, 1=On, x=On or Off



Dip Switch Settings (Default)	
S1	S2
1000	0001

Gateway Address Setting	
S1	Gateway Address:
1000	1
0100	2
1100	3
0010	4

For gateway address's 5-8 see p77

