

## (657222) Commissioning Notes & Wiring Diagram

This diagram is for models pre 2022 and R410a models.


1. Wire AirTouch 5, gateway and AC indoor as per diagram below and leave the dipswitches on the gateway at their default position. Make sure all wires are connected properly.
2. Change mode 10 value to 01 via AC wall controller.
3. If AC wall controller is not going to be used after commissioning, change mode 00 value to 01 via AC wall controller. Then remove the AC wall controller.

Note: 0=Off, 1=On

Gateway ID Setting	
S2	ID
0010	Braemar/Gree

Gateway Address Setting	
S1	Gateway Address:
1000	1
0100	2
1100	3
0010	4

This diagram is for models pre 2022 and R410a models.

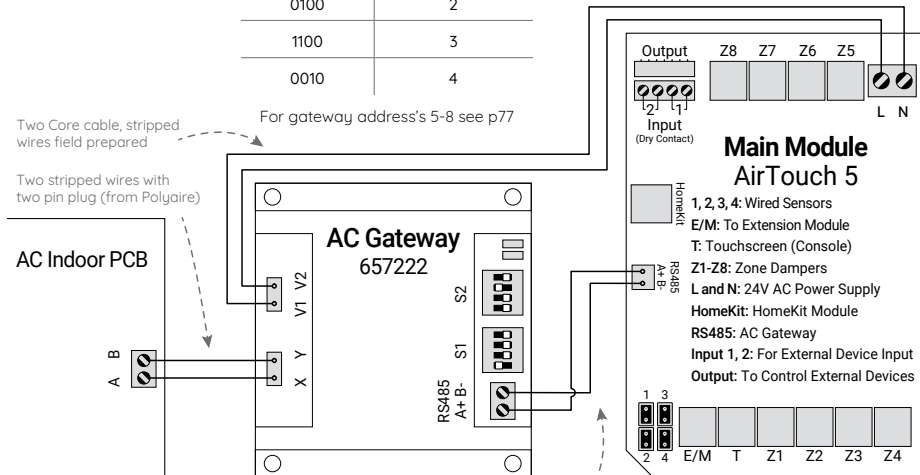

657211 (RS485 Cable) from Polyaire  
(Provided with Gateway)